

Installation instructions

UNIKA ACOUSTIC PANELS




The UNIKA series is suitable for wet rooms / bathrooms with a relative humidity below 55%. The ends must be sealed with a clear varnish when installing in all types of wet rooms





You will need a glue gun, FibroTech assembly adhesive, a spirit level, screwdriver, pencil and FibroTech black screws. We suggest you use cotton gloves when installing your product.

Note: Because of the amount of wood in the acoustic panels, they may smell a bit of wood. Therefore we recommend they are acclimatized before installation.

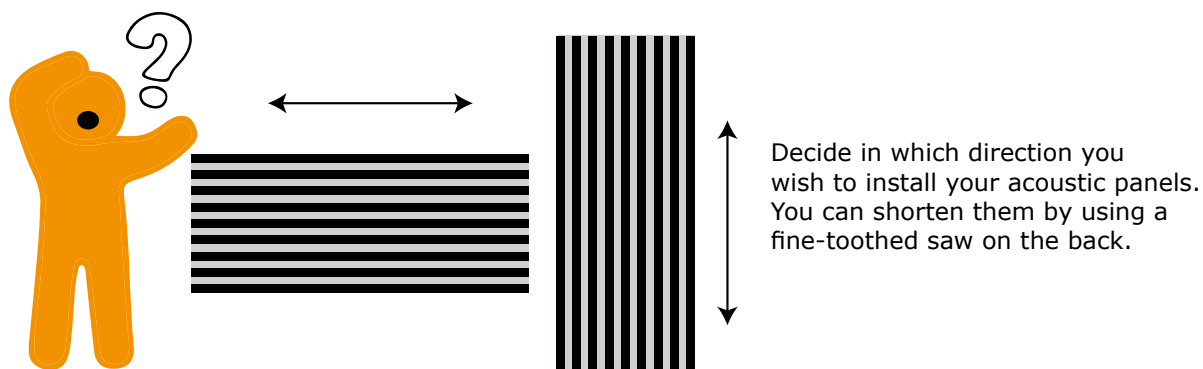


Apply glue on the back of the panels.

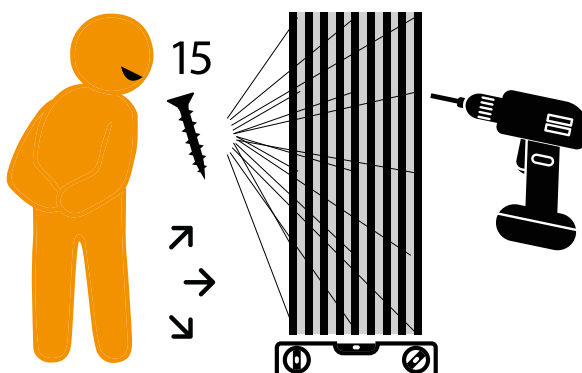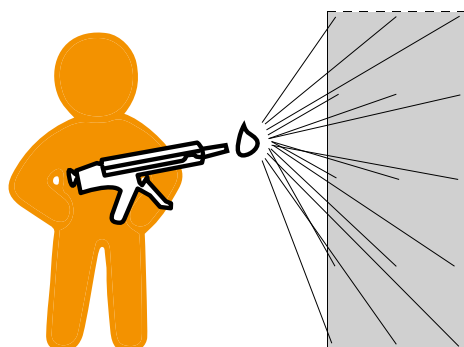

Use screws to install the acoustic panels on a wall or ceiling. You need 15 screws for each panel.

In case of shuttering, distance should be 60 mm.

Remember to hold onto wadding or solder.

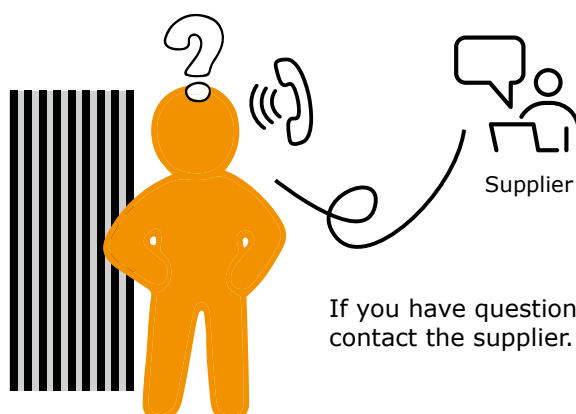

CE

Importer:
TreeTops A/S

The mark of
responsible forestry